

# **Q7**

## **Manual (2.3E)**

**WARNING!**

This refers to a potentially dangerous situation which may lead to personal injury.

**CAUTION!**

This refers to a potentially dangerous situation which may lead to personal injury.

**IMPORTANT!**

This refers to a situation which may cause the equipment to malfunction.

**Note:**

Additional informations and/or references

**Symbols on the equipment**

Please refer to the information in the operating manual.



**WARNING!**  
**Dangerous voltage!**

**General Information**

Q7 Manual

Version 2.3E, 11/2004, D2041.E.02

© by d&b audiotechnik AG 2004; all rights reserved.

The information contained in this manual has been carefully checked for accuracy, at the time of going to press, however no guarantee is given with respect to the correctness.

d&b audiotechnik AG accepts no responsibility for any errors or inaccuracies that may appear in this manual or the products and software described in it.

Technical specifications, dimensions, weights and properties do not represent guaranteed qualities.

As manufacturers we reserve the right to make alterations and modifications within the framework of legal provisions, as well as changes aimed at improving quality.

d&b audiotechnik AG  
Eugen-Adolff-Strasse 134, D-71522 Backnang, Germany  
Telephone +49-7191-9669-0, Fax +49-7191-95 00 00  
E-mail: docadmin@dbaudio.com, Internet: www.dbaudio.com

## Safety precautions

**Before you use our products, read the manual carefully and observe all the safety precautions. They will protect you and help to avoid equipment failures.**

**Keep this manual in a safe place so that it is available for future reference.**

**If you supply d&b products, please draw the attention of your customers to these safety guidelines. Enclose the relevant manuals with the systems. If you require additional manuals for this purpose, you can order them from d&b.**

### Information regarding use of loudspeakers



#### WARNING!

Never stand in the immediate vicinity of loudspeakers driven at a high level. Professional loudspeaker systems are capable of causing a sound pressure level detrimental to human health. Seemingly non-critical sound levels (from approx. 95 dB SPL) can cause hearing damage if people are exposed to it over a long period.

In order to prevent accidents when deploying loudspeakers on the ground or when flown, please take note of the following:

When setting up the loudspeakers or loudspeaker stands, make sure they are standing on a firm surface. If you place several systems on top of one another, use straps to secure them against movement.

Only use accessories which have been tested and approved by d&b for assembly and mobile deployment. Pay attention to the correct application and maximum load capacity of the accessories as detailed in our specific "Mounting instructions" or in our "Flying system and Rigging manuals".

Ensure that all additional hardware, fixings and fasteners used for installation or mobile deployment are of an appropriate size and load safety factor. Pay attention to the manufacturers instructions and to the relevant safety guidelines.


Regularly check the loudspeaker housings and accessories for visible signs of wear and tear, and replace them when necessary.

Regularly check all load bearing bolts in the mounting devices.

#### CAUTION!

Loudspeakers produce a static magnetic field even if they are not connected or are not in use. Therefore make sure when erecting and transporting loudspeakers that they are nowhere near equipment and objects which may be impaired or damaged by an external magnetic field. Generally speaking, a distance of 0.5 m (1.5 ft) from magnetic data carriers (floppy disks, audio and video tapes, bank cards, etc.) is sufficient; a distance of more than 1 m (3 ft) may be necessary with computer and video monitors.

## Q7

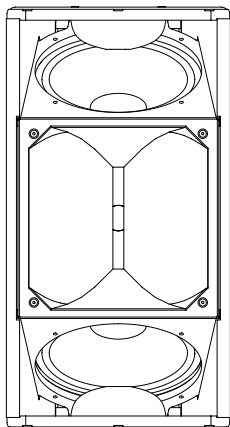

**Fig. 1: Q7 loudspeaker**

The Q7 is a 75° x 40° passive two-way loudspeaker. It houses 2 x 10" LF drivers and a 1.3" HF compression driver with a rotatable CD horn and a passive crossover network. Its frequency response extends from 60 Hz to above 17 kHz. The two 10" neodymium LF drivers are positioned in a dipolar arrangement providing exceptional vertical dispersion control even at lower frequencies.

The Q7 cabinet is constructed from marine plywood and has an impact resistant paint finish. The front of the loudspeaker cabinet is protected by a rigid metal grill, covered with a replaceable acoustically transparent foam. The cabinet incorporates a pair of handles.

The Q7 cabinet is fitted with four types of rigging device:

- Eight sockets in the front grill and rear edge bar, that accept the Z5153 Locking pins 8 mm, to connect the array links.
- A quick lock adapter plate on one side of the cabinet that accepts the Z5150 Q Swivel bracket or the Z5156 Q Flying adapter.
- Five sockets that accept the Z5048 Flying pin 10 mm for supporting single cabinets and for the aiming of arrays.
- Four M10 threaded inserts to accept the Z5020 Flying adapter 02, Z5025 Flying adapter 03 or Z5043 MAX Horizontal bracket.


### CAUTION!

Only operate Q7 loudspeakers with a d&b amplifier configured for the Q7 otherwise there is a risk of damage to the loudspeaker components.

### Connections

The Q7 cabinet is fitted with a pair of EP5 connectors. All five pins of both connectors are wired in parallel. The Q7 uses the pin assignments 1/2. Pins 3/4 and 5 are designated to Q-SUB active subwoofers, where pin 5 is used for SenseDrive (only available when using a D12 amplifier and 5-wire cabling). Using the male connector as the input, the female connector allows for direct connection to additional loudspeakers.

The Q7 can be supplied with NL4 output connectors as an option. Pin equivalents of EP5 and NL4 connectors are listed in the table below.

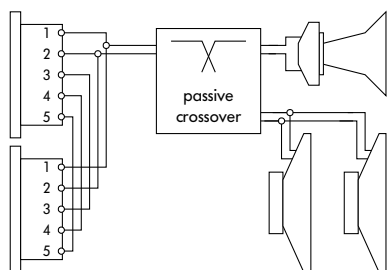

**Fig. 2: Connector wiring**

<b>EP5</b>	1	2	3	4	5
<b>NL4</b>	1+	1-	2+	2-	n.a.

**Tab. 1: EP5 and NL4 pin assignments**

## IMPORTANT!

### Operation with D12

Selecting Q7 mode in the D12 enables up to two Q7 loudspeakers to be driven by the respective channel. In applications with low continuous levels or low ambient temperatures up to three cabinets can be connected.

#### Controller settings

For acoustic adjustment the functions CUT, HFA and CPL can be selected.


##### CUT circuit

Set to CUT, the Q7 low frequency level is reduced. The Q7 is now configured for use with the Q-SUB or d&b C-Series subwoofers.


##### HFA circuit

In HFA mode (High Frequency Attenuation), the HF response of the Q7 system is rolled off. The HFA provides a natural, balanced frequency response when a unit is placed close to listeners in near field or delay use.

High Frequency Attenuation begins gradually at 1 kHz, dropping by approximately 3 dB at 10 kHz. This roll-off mimics the decline in frequency response experienced when listening to a system from a distance in a typically reverberant room or auditorium.

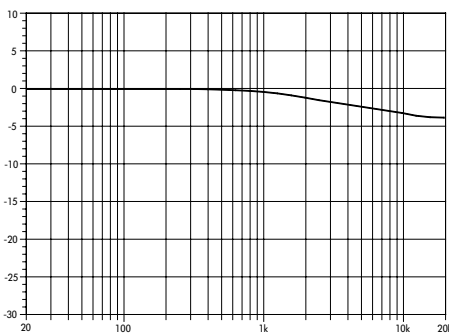

**Fig. 3: Frequency response correction of HFA circuit**

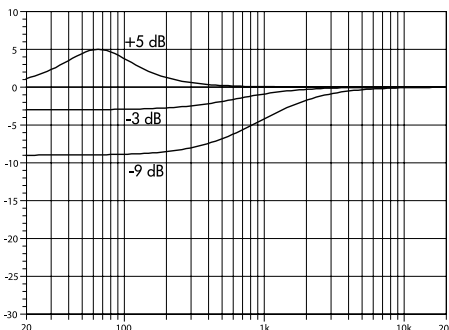

**Fig. 4: Frequency response correction of CPL circuit**

##### CPL circuit

The CPL (Coupling) circuit compensates for coupling effects between the cabinets when building closely coupled arrays. CPL begins gradually at 1 kHz, with maximum attenuation below 400 Hz, providing a balanced frequency response when Q7 cabinets are used in arrays of two or more. The function of the CPL circuit in the D12 amplifier is shown in the diagram opposite and can be set in dB attenuation values between -9 and 0, or a positive CPL value which creates an adjustable low frequency boost around 65 Hz (0 to +5 dB).


### Operation with E-PAC

Selecting Q7 mode enables the E-PAC to drive one Q7 loudspeaker. LO IMP mode configures the E-PAC to drive a maximum of two Q7 loudspeakers with a 6 dB reduction in input level to the loudspeakers.


For acoustic adjustment the functions CUT and CPL can be selected. The E-PAC CPL circuit creates a 3 dB attenuation corresponding with the -3 dB curve shown in Fig. 4.

## Dispersion characteristics


The graphs below show dispersion angle over frequency of a single Q7 cabinet plotted using lines of equal sound pressure (isobars) at  $-6$  dB and  $-12$  dB.

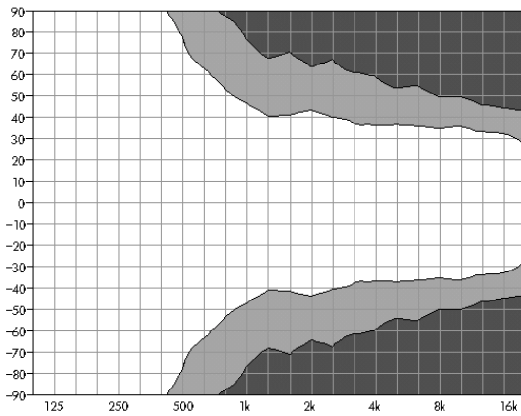


**Fig. 5: Isobar diagram Q7 horizontal, standard set up**

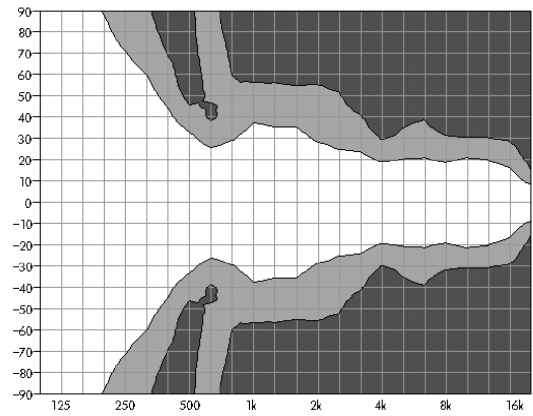


**Fig. 6: Isobar diagram Q7 vertical, standard set up**

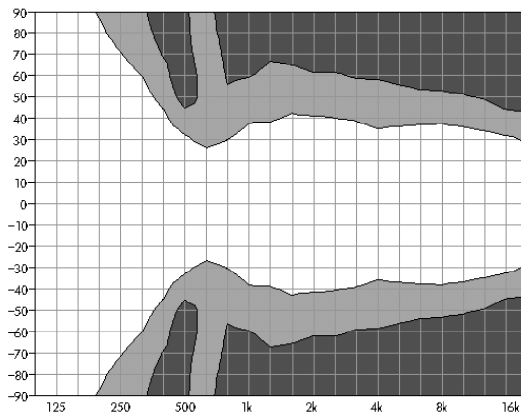

**Fig. 7: Isobar diagram Q7 horizontal, horizontal set up with the horn rotated**

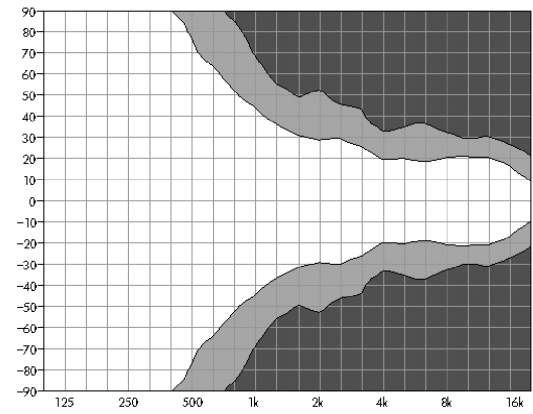

**Fig. 8: Isobar diagram Q7 vertical, horizontal set up with the horn rotated**

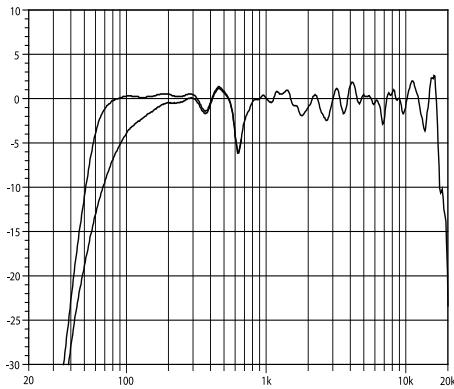

**Fig. 9: Q7 frequency response, standard and CUT settings**


## Technical specifications

### Q7 system data


Frequency response (-5 dB standard).....60 Hz ... 17 kHz  
 Frequency response (-5 dB CUT mode).....100 Hz ... 17 kHz  
 Max. sound pressure (single cabinet, 1 m, free field) with D12 .....138 dB  
 Max. sound pressure (single cabinet, 1 m, free field) with E-PAC .....134 dB  
 (SPLmax peak, pink noise test signal with crest factor of 4)  
 Input level (100 dB-SPL/1 m).....-17 dBu  
 Polarity to controller INPUT (XLR pin 2: +/3: -).....LF: +/HF: -

### Q7 loudspeaker

Nominal impedance.....8 ohms  
 Power handling capacity (RMS / peak 10 ms).....400/1600 W  
 Nominal dispersion angle (hor. x vert.).....75° x 40°  
 Components.....2 x 10" driver  
 .....1.3" compression driver  
 .....Passive crossover network  
 Connections.....2 x EP5  
 .....(optional 2 x NL4)  
 Pin assignments.....EP5: 1/2  
 .....NL4: 1+/1-  
 Weight.....22 kg (49 lb)

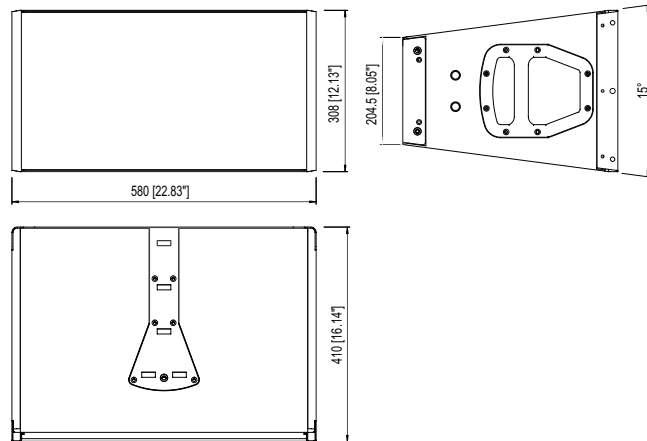

**Fig. 10: Q7 cabinet dimensions in mm [inch]**

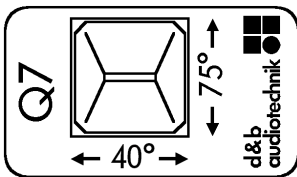

**Fig. 11: Q7 horn dispersion label**

## Altering the HF horn dispersion

The Q7 HF horn has a square flange allowing it to rotate through 90°. It can easily be accessed through an aperture in the front grill. A label (Fig. 11) on the horn flare helps to easily identify the orientation of the horn.

To rotate the horn undo the four countersunk Allen screws (M5 x 22) that hold the horn in place using a 3 mm Allen key. The horn can then be rotated through 90° and refastened (Torque setting 2 Nm).

### The HF horn of the Q7 cabinets until Serial-No.:

**Z050700000374 with EP5 connectors**  
**Z050700000217 with NL4 connectors**

**are not equipped with a safety wire against falling out. For this reason it is essential that all four self-locking screws are replaced and properly tightened. Otherwise there is the possibility that the horn and driver could fall out of the front of the cabinet.**

**Before setting up Q7 loudspeaker always ensure that the horn is mounted correctly.**



**WARNING!**

## **Arraying Q7 cabinets**

### **Horizontal array of Q7 cabinets**

The horizontal angle between adjacent Q7 cabinets can be set to between 40° and 60°. The most even energy distribution is achieved with 50°.

### **Vertical array of Q7 cabinets**

The vertical angle between adjacent Q7 cabinets can be set to between 20° and 40°. The most even energy distribution is achieved with 35°. Smaller angles between the cabinets will give a smaller coverage area but will produce higher sound pressure on the centre axis of the array.

### **Q7 used in line array columns with Q1s and Q-SUBs**

The Q7 with the horn rotated can be positioned at the bottom of a Q1 line array column to horizontally and vertically extend the near field coverage, if required. Using the standard Q1 array links to connect the Q7 cabinet the splay should be set to maximum 14°.

## EU declaration of conformity (CE symbol)



### EU conformity of loudspeakers

This declaration applies to loudspeakers manufactured by d&b audiotechnik AG and includes the types listed in the table below:

**- Q7 loudspeaker Z0507**

All production versions of these types are included, provided they correspond to the original technical version and have not been subject to any later design or electromechanical modifications.

**We herewith declare that said products are in conformity with the provisions of the following EC directives including all applicable amendments:**

**- 89/336 Electromagnetic Compatibility**

**The following standards have been applied:**

**- DIN EN 55013:08-1991**

**- DIN EN 55020:05-1995**

**- DIN EN 50082-1:03-1993**

